


# SK8 Assembly /Takedown



**Assembly:** Unroll. Engage tip wands. Slide assembled front tube into leading edge of sail. Fasten boom and out haul.

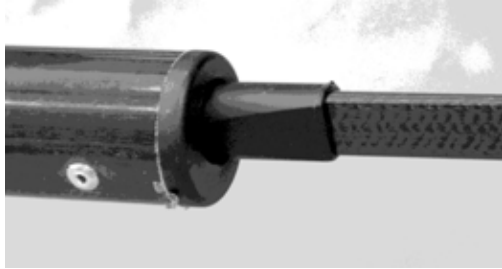

Ensure tip wands are engaged to sockets



**Takedown:** Relieve straps so tip wands can be pulled from sockets while front tube remains inside leading edge of sail. Leave tip wand straps attached. Remove boom parts. Bundle the boom parts next to front tube. Fold tip wands over boom parts.



Tension tip wand straps evenly.



Fasten boom. Tension out haul



**Sailing:** Hold the front tube below the boom in one hand, the boom in the other. Do not allow the sail to come between you and the wind to avoid being blown off your feet. Its best to pass the sail over your head when tacking and gibing.

SK8 works best whenever the wind is blowing. Its a skate sail designed for ice. The SK8 is versatile. Some folks have even used their SK8 sails with skis on fast snow.



Roll sail with boom parts inside.

